



UNIVERSAL POLE CLAMP (IMMOBILITY CLAMP)



Immobility Clamp is used for fixing or connecting other hardware fittings onto the tower/pole. It is divided into Immobility Clamp for tower and Immobility Clamp for Pole. Immobility Clamp for tower uses metal clamp while Immobility Clamp for Pole uses hoop.

SPECIFICATIONS

Universal Pole Clamp (Immobility Clamp) for Pole (200 – 210mm)



